



## Manual Heatingsystem:

### Guidelines:

- Always roll out the heating foil completely; otherwise the foil cannot loose its heat. Cut the foil, between the black strips, in the right length and tape the copper wires as the original strips.
- Put isolation material under the foil. This will increase the output of the system enormously.
- Always lay the strips neatly next to each other and never on each other; this can cause too much heat.
- Make sure that the sensor's point **ALWAYS** is situated in the place where you want to accomplish the established temperature.
- Never expose the foil to moist for a long time. If the foil gets wet, dry it carefully before using the system again.

### Establishing the wanted temperature:

- The temperature shown on the display is the actual temperature in the sensor point.
- Push one time on "F1", now "L1" appears in the display, which changes to a flickering number. This number is the established temperature. This temperature can be changed higher and lower, while it flickers, with the two arrow-buttons.
- If you have changed the established temperature, you can save this by pressing "F1" or by waiting until the thermostat goes back to its original state. In both ways the change is established.

We wish you a lot of cultivation succes with you heating system.

